

**3.7** The Base Unit and the Remote Unit are paired with each other at the factory in a process called subscription. If you replace your Remote Unit, or if your Remote Unit loses its subscription (shown by a rapidly flashing On-Off Indicator), you can perform the subscription process as follows:

- Hold both of the Talk (Sending) Fine-Adjust Volume Controls on the top of the Base Unit down.
- The Base Power Indicator will begin blinking.
- Hold the Remote Unit's Listen (Receiving) Fine-Adjust Volume Control in either the up or down position.
- The Remote Unit's On-Off Indicator will turn on steadily (no flashing).
- The Remote Unit will subscribe (or re-subscribe) to the Base Unit, after which the Base Power Indicator will return to the steadily on state and the Remote Unit's On-Off Indicator will go out.
- Unplug the AC Adapter from the Base Unit and then plug it back in.
- Press the Remote Unit's On-Off Button to enable the RF link and use the CA12CD.Talk (Sending) Fine-Adjust Volume Controls, Listen(Receiving)Fine-Adjust Volume Control