### **SAVE THESE INSTRUCTIONS**



- Do not place this product on an unstable cart, stand or table.

  The product may fall causing serious damage to the product.
- hampered. Additional weight will prevent the lifter from working.

  6 Do not locate or operate this product in a moist environment.
- Do not allow anything other than the telephone handset to rest on this product or locate it in an area where normal operation can be be appreced. Additional weight will prevent the litter from working
- for cleaning.
- Unplug the amplifier or power source from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth
  - Keep fingers and other objects clear of the lifting pad.Unplug the amplifier or power source from wall outlet b.
  - set Lifter according to these instructions.
- LKA10, and Avaya products manufactured for use with the HL10 Handset Lifter. It should not be used for any other purpose.

  To ensure safe operation, install, adjust and operate the HL10 Hand-
- The intended purpose of this HL10 Handset Lifter is to lift and lower the telephone handset in conjunction with Avaya amplifiers LC510,

Read all instructions before using. When using telephone equipment and accessories, basic safety precautions should be taken to reduce risk of fire, electric shock, and to persons including the following:

# IMPORTANT SAFETY SUCTIONS






### **TECHNICAL SUPPORT**

After you have completed the instructions in the Quick Start Guide and reviewed the Troubleshooting Section (the inside foldout) and still have questions, please contact our Technical Assistance Center.

### **Avaya Technical Assistance Center**

For assistance and accessibility information call the Avaya Technical Assistance Center (TAC) (800) 628-2888 Sunday 5 p.m. through Friday 5 p.m. Pacific Standard Time

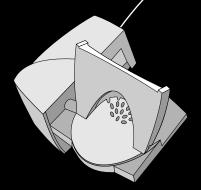

**Quick Start & Information Guide** 



61851-01 (12.01)

### **SAVE THESE INSTRUCTIONS**

### The product may fall causing serious damage to the product.

- Do not place this product on an unstable cart, stand or table.
- this product or locate it in an area where normal operation can be
- hampered. Additional weight will prevent the lifter from working.
- for cleaning. 5 Do not allow anything other than the telephone handset to rest on

4 Unplug the amplifier or power source from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth

- 6 Do not locate or operate this product in a moist environment.



61851\_01.qxd 12/6/01 12:31 AM Page 1



IMPORTANT SAFETY INSTRUCTIONS

1 The intended purpose of this HL10 Handset Lifter is to lift and lower the telephone handset in conjunction with Avaya amplifiers LCS10, LKA10, and Avaya products manufactured for use with the HL10 Handset Lifter. It should not be used for any other purpose. 2 To ensure safe operation, install, adjust and operate the HL10 Hand-

When using telephone equipment and accessories, basic safety precautions should be taken to reduce risk of fire, electric shock,

Read all instructions before using.

and to persons including the following:

set Lifter according to these instructions.

3 Keep fingers and other objects clear of the lifting pad.



## **TECHNICAL SUPPORT**

Assistance Center. foldout) and still have questions, please contact our Technical Guide and reviewed the Troubleshooting Section (the inside After you have completed the instructions in the Quick Start

### Avaya Technical Assistance Center


Friday 5 P.M. Pacific Standard Time (800) 628-2888 Sunday 5 PM. through Avaya Technical Assistance Center (TAC) For assistance and accessibility information call the

AVA Communication

Quick Start & Information Guide

(10.21) 10-12816

## HL10 HANDSET LIFTER ACCESSORY

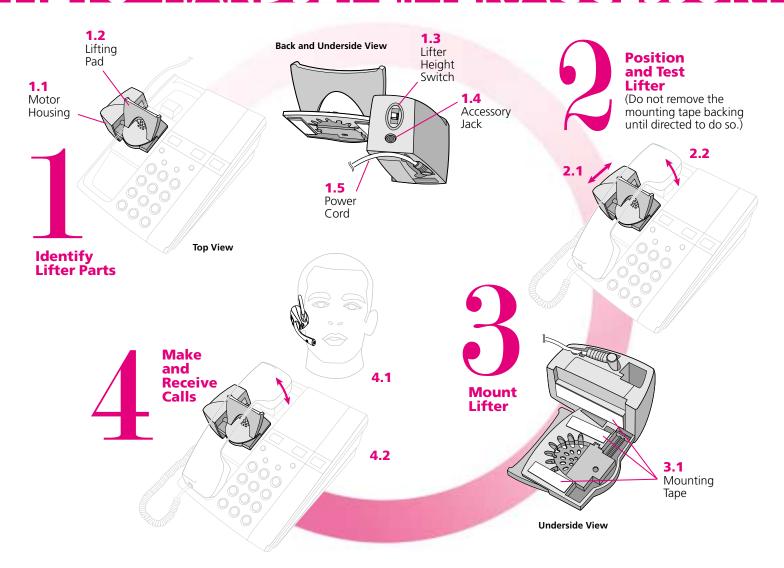

## QUICK START GUIDE

The HL10 Handset Lifter accessory is designed to automatically lift the telephone handset off the cradle when activated by your Avaya amplifier.

### 1 Identify Lifter Parts

- **1.1** Motor Housing
- 1.2 Lifting Pad
- **1.3** Lifter Height Switch (low, medium, or high)
- 1.4 Accessory Jack
- **1.5** Power Cord (non-removable)

### **2 Position And Test Lifter**

- **2.1** Plug the power cord into your Avaya amplifier accessory jack and position the lifter under your telephone handset towards the earpiece. You may need to position the lifter slightly differently for optimal lifting. (*Tip: Remove only a tiny piece of the mounting tape backing to temporarily stick the lifter into a test position.*)
- **2.2** Use the three position lifter height switch to adjust the lifter to its optimum height. Test the lifter's position by pressing the talk button on your amplifier, remote unit or headset. You should hear a dial tone in the headset if the telephone handset is raised high enough.

### 3 Mount Lifter

### **3.1** Mounting Tape

Once you have determined the best position for the lifter, remove the mounting tape backing on the top or side to best adhere the lifter to your telephone. On a few telephones both the top and side mounting tapes must be used to firmly grip the telephone.

### 4 Make And Receive Calls

- **4.1** Put on your headset and press the talk button.
- **4.2** This action directs the lifter to raise the telephone handset from the cradle and activates the telephone line.

To make a call, use your telephone or remote dial pad to dial the number. When your call is complete, press the talk button again to hang up

When receiving a call, the ring detector senses a ring from your telephone and transmits it to your remote unit or headset. You can answer the call by pressing the talk button and begin talking through your headset. When finished press the talk button again to hang up.

**Note:** For remote ring detection to work you may need to increase the telephone ringer volume. In some cases, telephones with multiring tone choices may require trying several tones to choose the most effective sound for ring detection.

### **TROUBLESHOOTING**

### I cannot hear a dial tone

- Press the talk button to activate your amplifier.
- Set lifter height switch to a higher setting, if it's not opening the hookswitch.

### I hear a ring on the telephone but not the remote

- Check that the remote unit ringer switch is set to the "on" position.
- Make sure the lifter power cord is completely plugged into the amplifier or base.
- Your phone's ringer volume may have to be turned up.

### The lifter does not lift the handset

- First check that the headset works by manually lifting the telephone handset from its cradle.
- Reset the remote unit or headset into the charger for 20 seconds to reestablish synchronization.